


A Assembly Instructions

Green Mamba

Art.-No. 4591-81 GM

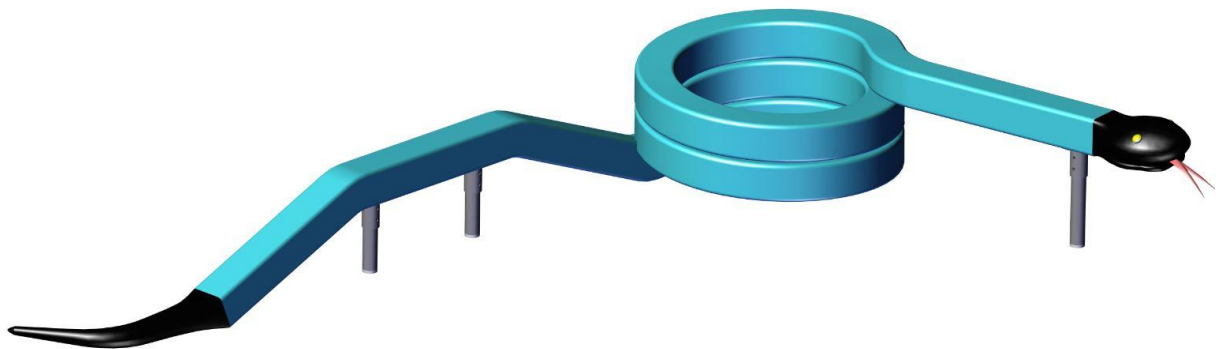

Operator: _____

Location: _____

Revision 0 – 2020-06-05

Erste freigegebene Version

Montageanleitung PR

Revision 2 – 2023-07-21

Anleitung aktualisiert FH

Alle Rechte vorbehalten

© Copyright 2020 Huck Seiltechnik GmbH

**Please note the explanations and abbreviations and notes.
For any queries please contact the manufacturer**

Contents

A	Assembly Instructions Green Mamba Art.-No. 4591-81 GM.....	1
1	Introduction Assembling.....	4
2	Datasheet: Green Mamba Art.-Nr.4591-81 GM	6
3	Delivery contents (parts list with part numbers)	7
4	Explanation of abbreviations and signs.....	9
5	Assembly instructions.....	11
6	Post installation checks	15
B	Maintenance instructions Green Mamba Art.-Nr. 4591-81 GM.....	17
7	Introduction Maintenance.....	19
8	General maintenance information	20
9	Maintenance timetable.....	22
10	Regular maintenance.....	23
11	Monthly maintenance	24
12	Quarterly maintenance	24
13	Half yearly maintenance	25
14	Annual maintenance.....	25
15	Maintenance printout.....	27
16	Hand over document	29

List of Tables

Table 3-1: Delivery contents, in words	7
Table 3-2: Delivery contents, in symbols.....	9

1 Introduction Assembling

1.1 General information

This equipment should be installed, inspected, maintained and operated in accordance with EN1176-7 guidelines.

Before installation work commences, please check that you have all of the equipment and fixation components in the parts list provided (see Tables 3-1 and 3-2).

Please consider that the installation has to be carried out only on even terrain (max.slope up to 3%).

Any spare parts that may be required can be obtained directly from your supplier or from Fa. Huck Seiltechnik GmbH

Adress: Huck Seiltechnik GmbH
 Dillerberg 3
 D-35614 Asslar/Berghausen
 Tel. +49 6443 83 11-99
 Fax +49 6443 83 11-79

Please do not hesitate to call your supplier if you have any problems during installation or with any other questions. You can reach us at the following
Tel. +49 6443 83 11- 0.



Following installation, complete assembly instructions, maintenance instructions and a maintenance record must be sent to the operator who must confirm receipt in writing. See the last page of this document.



All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

Drawings / Views

All optical drawings are showing only the measurements/dimensions and are no mandatory technical views of the complete item.

We reserve the right to change technical details of our articles which are serving for the further development of our articles and are reasonable for the customer.

Measurement tolerances

Because of the properties and characteristics of the components, minor measurement tolerances compared to the indication on the sketches are possible.

This concerns all shown measurements except the foundation measurements resp. measurements below upper edge ground level/play area.

2 Datasheet: Green Mamba Art.-Nr.4591-81 GM

Space requirement: 3.55 m x 2.35 m

Safety zone: 6.50 x 5.10 m

(can vary according to customer requirements!!)

Height of equipment: 600mm

Height of Fall: 600mm

Soil material	Description in mm	Minimum layer-thicknesses in mm	Maximum Drop height mm
Bark mulch	20 - 80 Grain size	300 400	<= 2000 <= 3000
Woodchips	5 - 30 Grain size	300 400	<= 2000 <= 3000
Sand	0.2 - 2 Grain size	300 400	<= 2000 <= 3000
Gravel	20 - 80 Grain size	300 400	<= 2000 <= 3000
Other soil materials and other layered surfaces	as tested according to HIC(see EN 1177)		Critical drop height as tested

1. Required safety surface:
2. Name and size of the largest part of the device:
PP-Rope pos. 01 / 900mm x 4000mm long
3. Name and weight of the heaviest part of the equipment:
PP-Rope pos. 01 / ca. 95 kg
4. Intended age group: from 3 years
5. Attention! Device for embedding + for setting in concrete:
Excavation size:
3x 800mm x 800mm x 800mm
6. assembly time approx. 1.5 hours after completion of the excavation of the respective excavation sizes
Needed persons: 3
7. Possibly required spare parts can be obtained directly from your supplier or from the company Huck Seiltechnik GmbH
Adress: Huck Seiltechnik GmbH
Dillerberg 3
D-35614 Asslar/Berghausen
Tel. +49(0)6443/8311-0
Fax.+49(0)6443/8311-79
8. We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176-1.






3 Delivery contents (parts list with part numbers)


3.1. In words

Table 3-1: Delivery contents, in words

Pos.	Quantity	Element / Description	Size	O.K.	Mis- sing
1.0	1x	PP-Rope, square	Ø 160mm ca. L=10.00m		
1.1	3x	Hexagon head screw DIN 933 full thread vz + U-Sch. DIN 9021 Vz.	M16 x 30 + U-Sch.		
1.2	6x	Hexagon head screw gal- vanized DIN 931 partial thread	M10 x 75 mm		
1.3	6x	Galvanized cap nut DIN 986 with stop function	M10		
2.0	1x	Steelpost galv.	Ø 51 x 2,9mm L=1,15m		
2.1	2x	Steelpost galv	Ø 51 x 2,9mm L=1,06m		
3.0	3x	Anchor flat zinc plated	500 x 500 mm		

3.2. In symbols

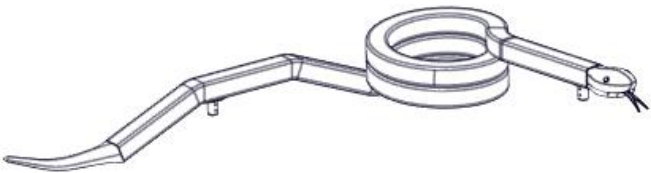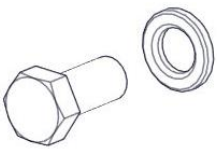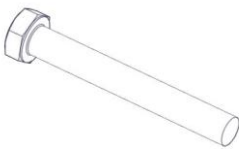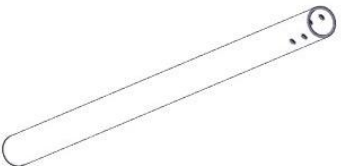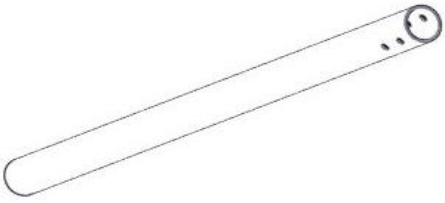Pos.	Quantity	Symbol
1.0	1x	 L= ca.10.00m
1.1	3x	 M16 x 30mm + M16 / Ø50mm
1.2	6x	 M10 x 75mm
1.3	6x	 M10
2.0	1x	 Ø 51mm x 2,9mm L= 1,15m
2.1	2x	 Ø 51mm x 2,9mm L= 1,06m

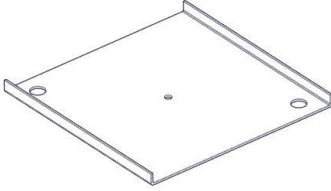
Pos.	Quantity	Symbol
3.0	3x	 500 x 500mm

Explanation of abbreviations and signs

	Abbreviations
Ka.O	Edge points upwards
Sp-Gr.	Put the play equipment on the tubes
Aus.v.v.	Thoroughly recompact the excavated material
G	Seepage layer 10 cm
PS	Security area
Wa.A.b	Observe the maintenance instructions!!!


See drawings!

Screw locking device!

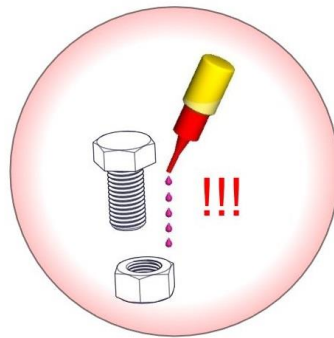

**Glue all screws, nuts and sleeves with loctite.
(Not less than 5 drops!)
(except for lock nut)**

4 Assembly instructions

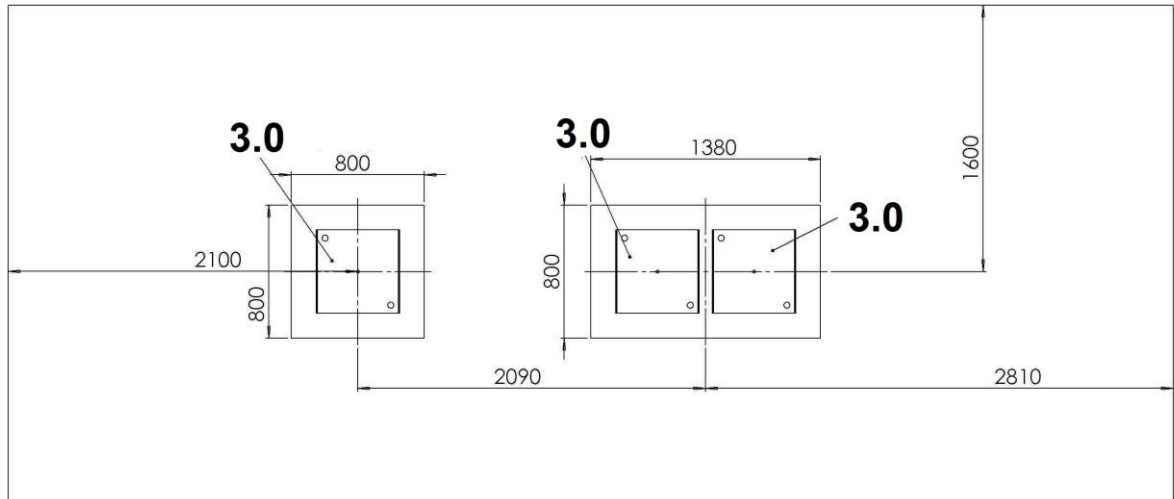




All approx. measurements!!!



Snake is individually adjustable!


Important: from the outer contour of the tampon rope 1.50 m

Keep to minimum space

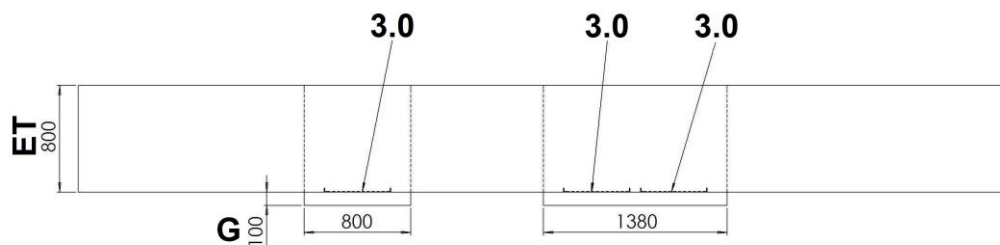

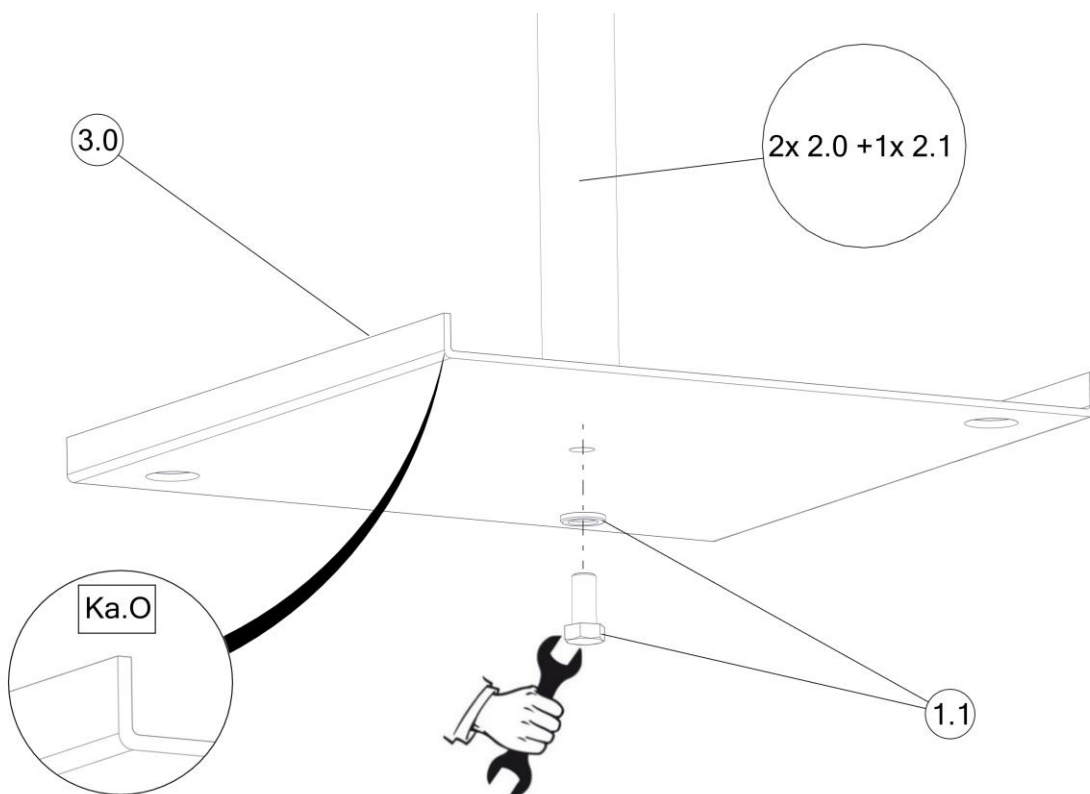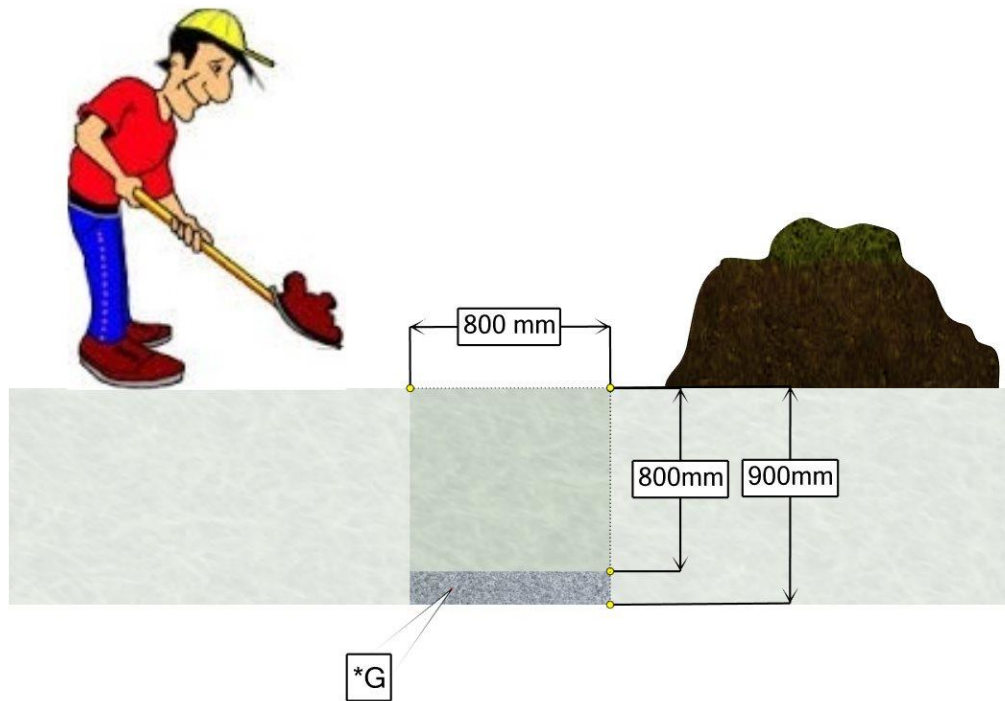

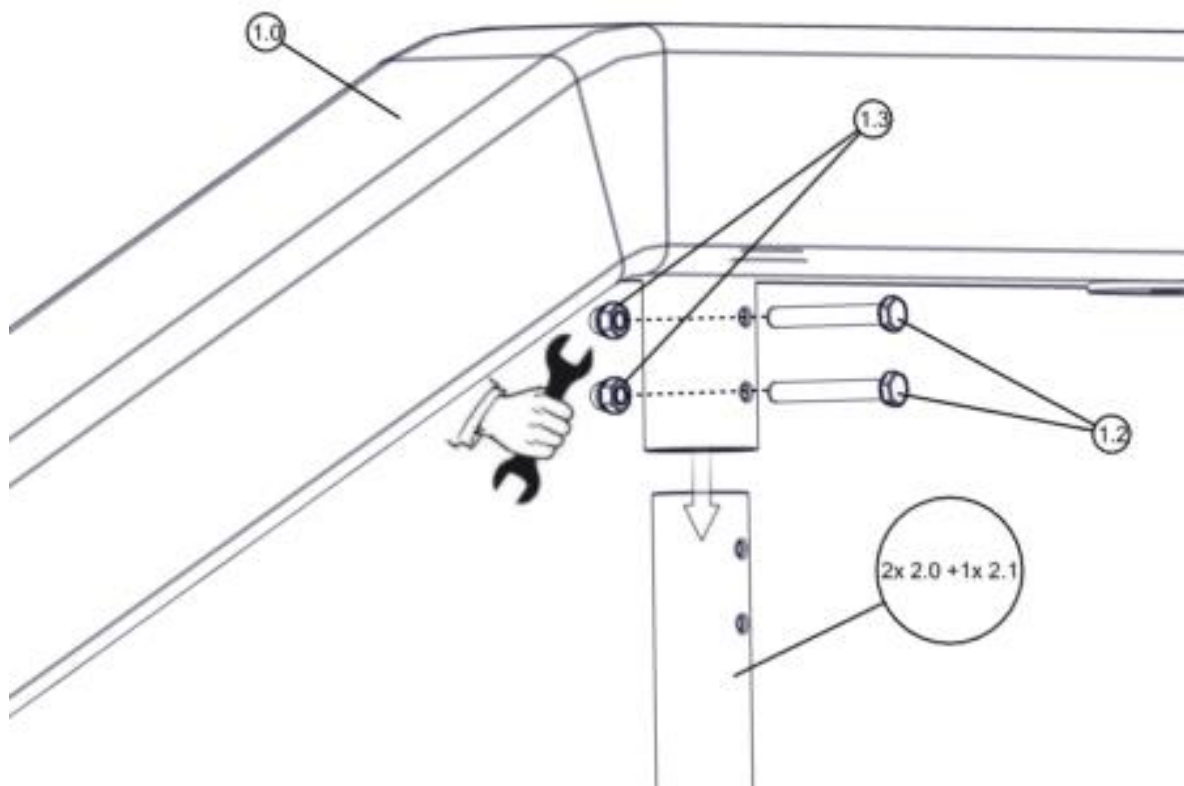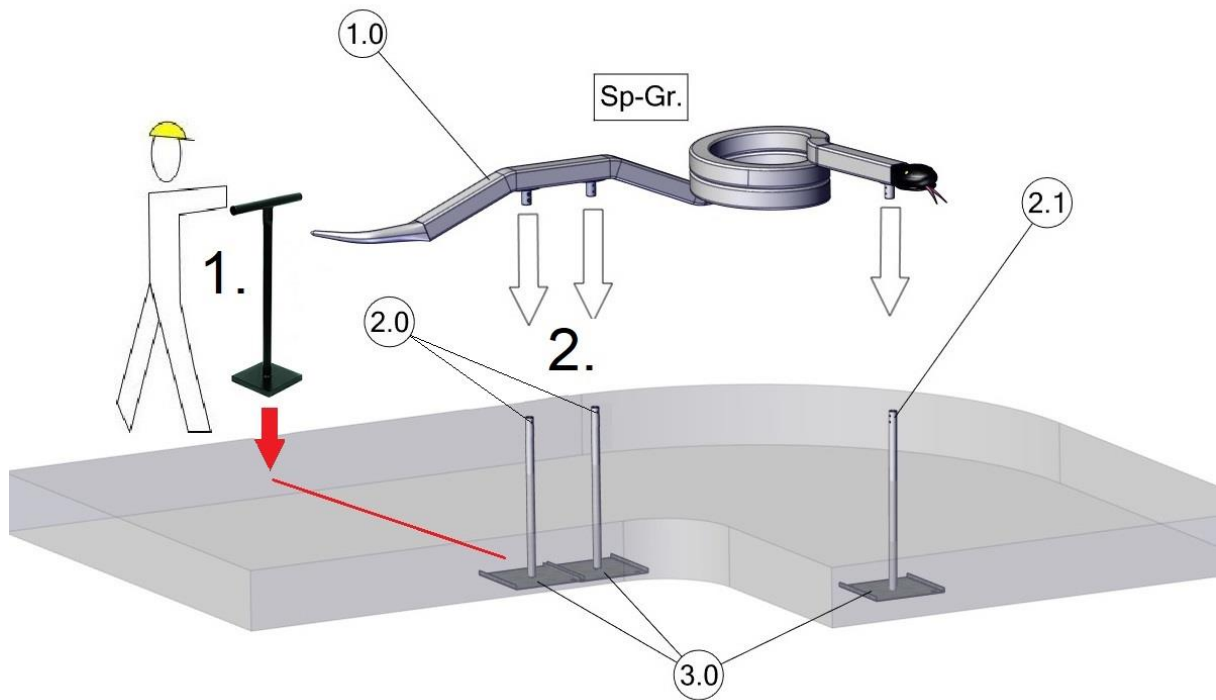

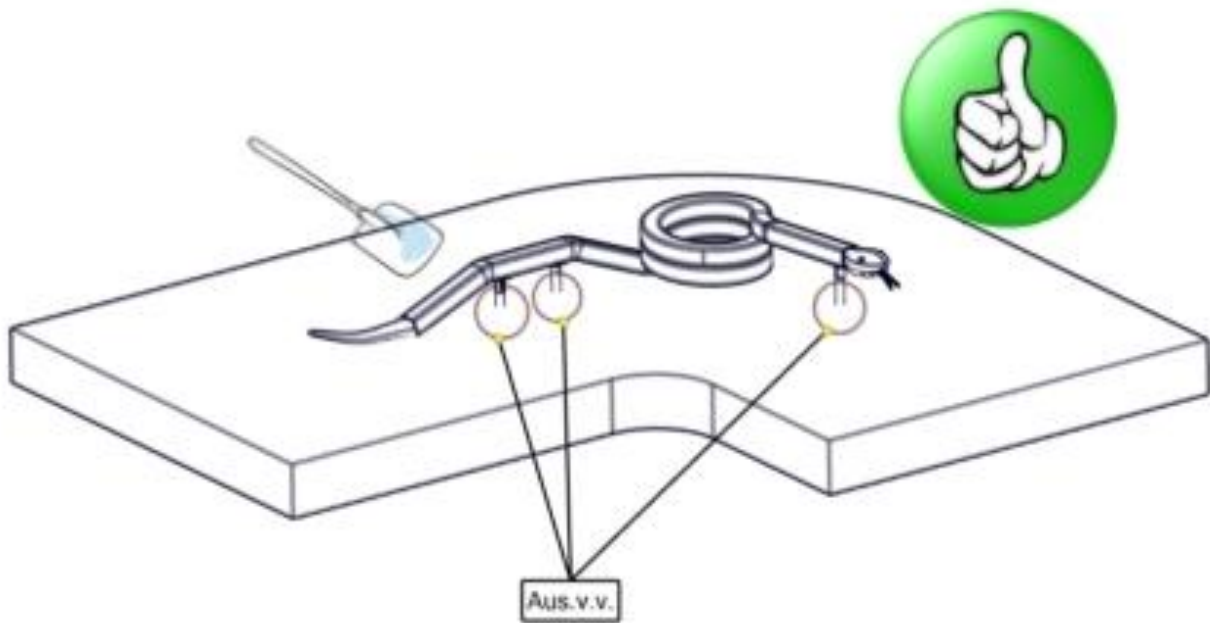

5 Post installation checks



Notice

If the equipment has not been installed safely, you must ensure that the public is prevented from using it.

5.1 Marking filler depth

Labelling the posts to show the depth of material provided as fall protection (i.e. loose filler).

5.2 The equipment has not been installed safely in the following cases:

- Safe equipment installation is not complete.
- The protective surface has not been installed yet.
- Appropriate maintenance work cannot guarantee operational safety.

5.3 Removal of all assembly aids

Please make sure that all assembly aids have been removed from the playing area. The equipment must not be approved for use until this check has been made.

5.4 Information about inspection of the equipment before it is used for the first time

There are no special inspection requirements to be met before the equipment is used for the first time.

5.5 Retighten bolts


After one week of play, please retighten all bolts again. Later upon respective maintenance.

.

B Maintenance instructions

Green Mamba

Art.-Nr. 4591-81 GM

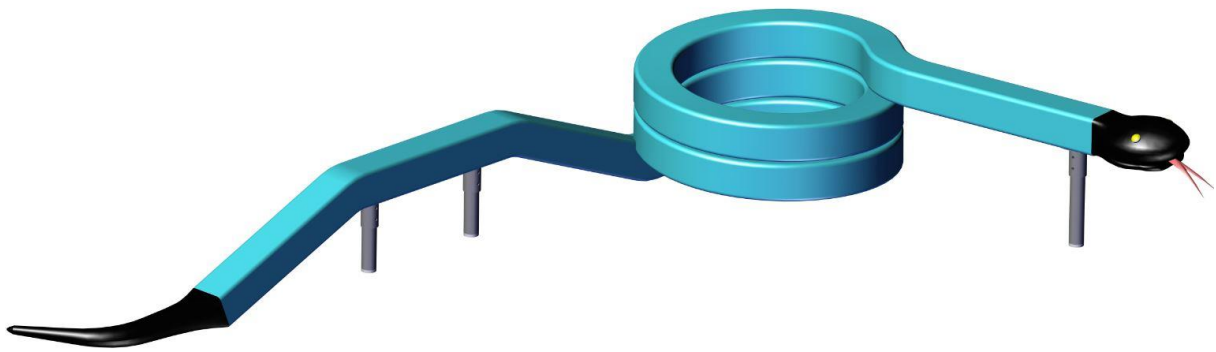

Revision 0 – 2020-06-05

Erste freigegebene Version

Montageanleitung PR

Alle Rechte vorbehalten

© Copyright 2015 Huck Seiltechnik GmbH

6 Introduction Maintenance

6.1 General informations

This equipment should be installed, inspected, maintained and operated in accordance with EN 1176-7 guidelines.



Notice

Please note: Providing any necessary repairs are carried out, a piece of play equipment that is inspected regularly cannot become so damaged that it is dangerous.

Any spare parts which may be required can be obtained directly from your supplier or from Fa. Huck Seiltechnik GmbH

Adress: Huck Seiltechnik GmbH
 Dillerberg 3
 D-35614 Asslar/Berghausen
 Tel. +49 6443 83 11-99
 Fax +49 6443 83 11-79



This equipment should only be assembled, maintained and repaired by **persons with the necessary expertise.**

A copy of the inspection record should be given to the operator, who must confirm receipt.

**This maintenance instruction is based on the standard
“EN 1176-1:2017”.**

7 General maintenance information

7.1 Maintenance intervals

Maintenance intervals are based on average use. Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

7.2 Inspection frequency

The frequency of inspections must be based on actual use. Factors that affect frequency include vandalism, location (e.g. coastal proximity), air pollution and the age of the equipment.

7.3 Maintenance products and procedures

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

7.4 Spare parts

All spare parts must conform to the manufacturer's specifications.

7.5 Identifying spare parts

All spare parts are listed in the parts list. The parts list follows the installation requirements.

7.6 Special instructions for the disposal of individual equipment components

No special instructions are necessary for the disposal of individual equipment components.

7.7 Special measures during the break-in period

No later than 2 weeks after assembly, all screwed connections should be checked and tightened if necessary.

7.8 Maintenance of protective surfaces

Surfaces providing fall protection must also be maintained regularly. It is particularly important to maintain the correct level of loose surface material and add more if necessary.

7.9 Faults



Faults must be repaired as soon as they are detected. If serious defects that compromise safety cannot be repaired straight away, the public must be prevented from using the equipment with immediate effect.

7.10 Loose screws



Loose screws always cause quality problems and put safety at risk. Therefore, loose screws should always be tightened and checks carried out to ensure that there are no missing screws (e.g. look out for holes you can see through).

7.11 Preventing equipment use

Use of the equipment should be prevented in the event of incomplete installation, disassembly, maintenance, repairs and faults.

7.12 Claims/liability for faults

Steel posts and footings are guaranteed if regular maintenance is carried out and recorded in writing. Our general terms and conditions apply. Maintenance first takes place after 3 years. The steel posts must be excavated as far as the concrete foundations and checked for corrosion. Zinc paint should be applied to any corroded areas and scratches. Check ropes for abrasion. Retreat any that are very worn.

8 Maintenance timetable

8.1 Special advices

8.1.1 Maintenance interval

We strongly advise you to carry out inspections and maintenance work within the specified periods as use of the equipment, the weather and malicious vandalism cause wear and tear that compromises the safety and function of the equipment.

8.1.2 Maintenance intervals in the event of intensive use

Please note that more frequent inspections and/or maintenance are required if the equipment is subject to intensive use.

8.1.3 Faults that compromise safety



Notice

In the event of a fault that compromises safety, quick action must be taken. This may involve repairing it immediately or shutting down and dismantling the equipment.


8.1.4 Faults that compromise function



Notice

Faults that compromise function should also be repaired immediately. Such faults lower the value of the equipment to the user and encourage malicious vandalism, which may render the equipment less safe. Any damage should also be repaired immediately.

9 Regular maintenance

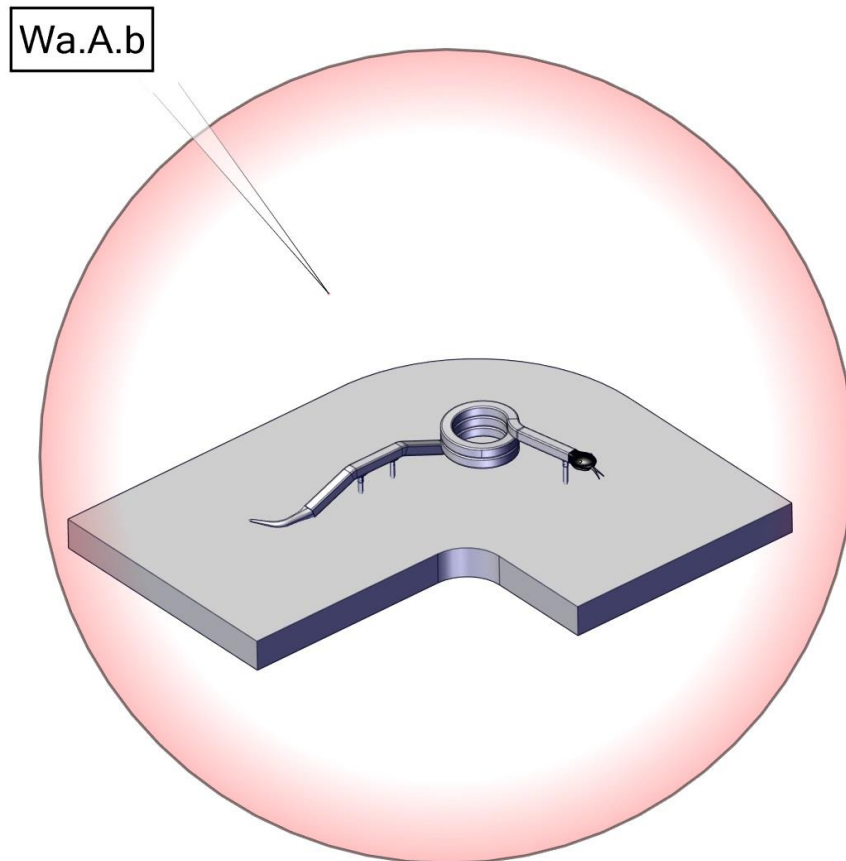

Regular maintenance

10 Monthly maintenance

- 10.1 Check the spaces between the equipment and the ground (clearance and height of fall).**
- 10.2 Check the ground surface in the area with fall protection for hard objects and loose foundations.**
- 10.3 Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.**
- 10.4 Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.**
- 10.5 Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.**
- 10.6 Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.**
- 10.7 If necessary, remove excess padding material from the post footings due to danger of rotting.**
- 10.8 Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.**
- 10.9 Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.**

11 Quarterly maintenance

- 11.1 Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.**
- 11.2 Tighten all forms of attachment.**
- 11.3 Repaint and retreat surfaces.**
- 11.4 Maintenance of fall protection surfaces.**
- 11.5 Lubrication of joints.**
- 11.6 Check the height of the fall and top up with loose filler if necessary. If the posts are labelled, top up as far as the mark.**
- 11.7 Retighten all bolts**

12 Half yearly maintenance

- 12.1 Stability (check posts, bracing, foundations, etc.). Ascertaining whether there are any changes in equipment safety as a result of repairs that have been carried out or components that have been added or replaced.

 Attention	Annual Maintenance
--	-----------------------------

13 Annual maintenance

- 13.1 Ascertaining that the equipment, foundations and surfaces are safe for operation.
- 13.2 In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches.

 Attention	The equipment must be inspected by someone with the necessary expertise in strict compliance with the instructions issued by Huck Seiltechnik GmbH. A copy of the inspection record should be given to the operator, who must confirm receipt.
--	--

14 Maintenance printout

Name of item: Green Mamba / Art.-Nr. 4591-81 GM _____

Location: _____

Customer or operator: _____
(Town, Town council, Kindergarten)

Date of inspection	Inspector	O.K.	Accessible	Barrierred	Defects	Repaired by	Date

Please copy and return once a year after main inspection has been carried out to the manufacturer by Telefax +49 6443 83 11-79
Place the confirmation form in your existing play equipment files.

15 Hand over document



After the installation of the equipment pass the installation and maintenance documents to the operator. The operator has to receive the hand over documents. The complete filled and signed hand over document should be sent to the supplier Huck Seiltechnik GmbH per Telefax +49 6443 8311-79

Art.-No.: 4591-81 GM

Type of item: Green Mamba

Serial number: _____

Customer or operator (Town, Town council, Kindergarten, etc.):

Competent person in charge:

Installation company (address):

Responsible assistant (assembler):

Received the complete assembly instructions, maintenance instructions and maintenance printout,

(Signature of operator)
(Stamp)

(Signature of installation company)

Date: _____