


A Assembly instruction “System” Element 10 and Element 11 Art. 4591-30-10 and Art. 4591-30-11

Attention! Only use the assembly instructions included in the scope of delivery for the assembly, installation and maintenance of the respective equipment!

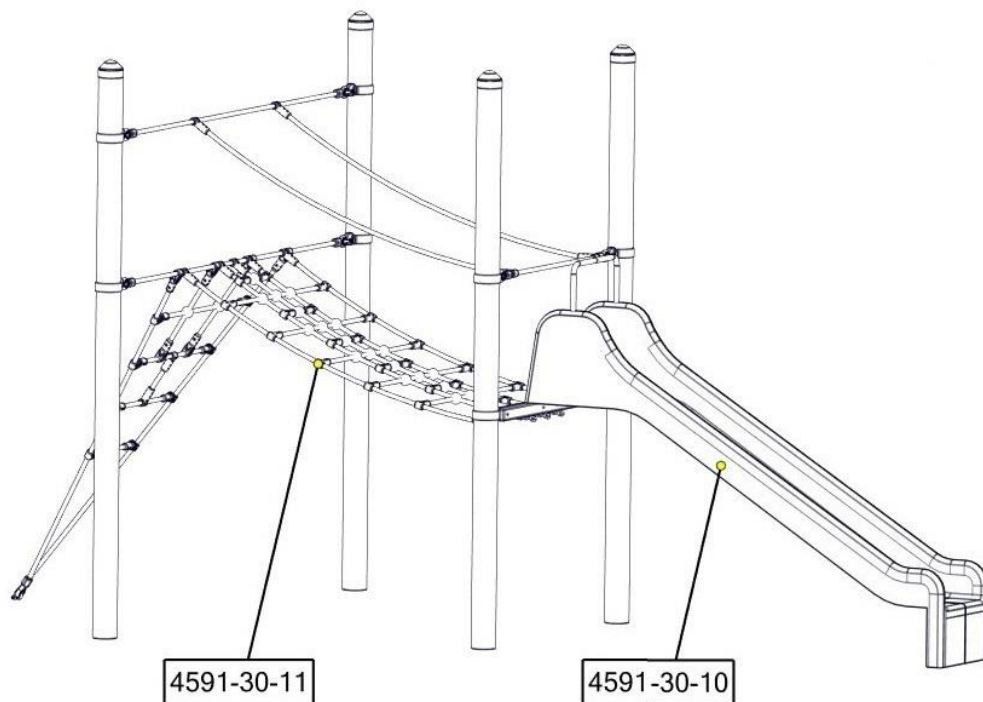

Operator: _____

Location: _____

Attention!

**The centre distance for this device is 2.25 m (centre-to-centre).
In the event of a possible extension with other rope course
elements (e.g. "Haiger-Parcours 3.00m", "Dillenburg 3.00m",
"Fun Parcours 3.00m"), the different post spacing must be
observed!**

Revisionshistorie

Revision 0 – 2007- 03-08

Erste freigegebene Version

Montageanleitung SP

Revision 8– 2025-01-31

Seite 1 Hinweis auf unterschiedliche Pfostenabstände geä. FHalle Rechte vorbehalten

© Copyright 2007 Huck Seiltechnik GmbH

Contents

A	Assembly instruction “System” Element 10 and Element 11 Art. 4591-30-10 and Art. 4591-30-11.....	1
1	Introduction Assembling	4
2	Datasheet “System”: Elements 10 and 11 No. 4591-30-10 and Art. 4591-30-11.....	5
3	Delivery contents (parts list with part numbers).....	6
4	Erection instructions.....	11
5	Post installation checks.....	18
B	Maintenance instruction “System” Elements 10 and 11 Art.-No. 4591-30-10 and Art.-No. 4591-30-11.....	19
6	Introduction Maintenance	21
7	General maintenance information	22
8	Regular maintenance	24
9	Maintenance timetable	26
10	Monthly maintenance	27
11	Quarterly maintenance	27
12	Half yearly maintenance.....	27
13	Annual maintenance.....	28
14	Maintenance printout	29
15	Hand over document	31

List of Tables

Table 3-1: Delivery contents, in words	6
Table 3-2: Delivery contents, in symbols	7

1 Introduction Assembling

1.1 General information

This equipment should be installed, inspected, maintained and operated in accordance with EN1176-7 guidelines.

Before installation work commences, please check that you have all of the equipment and fixation components in the parts list provided (see Tables 3-1 and 3-2).

Any spare parts that may be required can be obtained directly from your supplier.

Please do not hesitate to call us on **+496443-8311 0** if you have any problems during installation or with any other questions.



Following installation, complete assembly instructions, maintenance instructions and a maintenance record must be sent to the operator who must confirm receipt in writing. See the last page of this document.



All nuts and bolts are hot-dip galvanised or stainless steel.

One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

We hereby confirm that this play equipment has been tested and certified in accordance with the play equipment standard EN 1176.

2 Datasheet “System”: Elements 10 and 11 No. 4591-30-10 and Art. 4591-30-11

1. 4591-30-10 + 11:
 Required space without safety area: 3.85 m x 3.05 m
 Required space including safety area: 5.35 m x 7.10 m
 Height of fall: 1.50 m
2. Required safety surface:

Surface material	Description mm	Minimum thickness of layer mm	Maximum height of fall mm
Topsoil grass			<= 1000*
Chipped bark	20 – 80 grain size	300	<= 3000
Wood chippings	5 – 30 grain size	300	<= 3000
Sand	0.2 – 2 grain size	300	<= 3000
Gravel	2 – 8 grain size	300	<= 3000
Other ground materials	As recommended by manufacturer	300	

3. Name and overall dimension of the largest component
 4 steel posts; length 3.40 m, ø 102 mm
4. Intended age group: 4 years and over
5. **Please note that this equipment is set in concrete.**
 Concrete: C25/30
 Required concrete: 0.80 m³
 Foundations/area to be excavated (Element 11):
2 x 0.80 m long x 0.80 m wide, total depth 1.10 m including 10 cm drainage
1 x 0.80 m long x 1.80 m wide, total depth 1.10 m including 10 cm drainage
 top edge of concrete rounded.
 Foundations/area to be excavated (Element 10):
1 x 0.40 m long x 0.70 m wide, total depth 0.90 m including 10 cm drainage
 The foot of the slide is set without concrete (see ASV, page 11)
6. Assembly time per element, once foundations complete: 45 minutes.
 Required assistance: 2 people.
7. Any spare parts which may be required can be obtained directly from
 your supplier
8. **We hereby confirm that this item of play equipment has been tested and
 certified in accordance with the play equipment standard EN 1176.**

3 Delivery contents (parts list with part numbers)

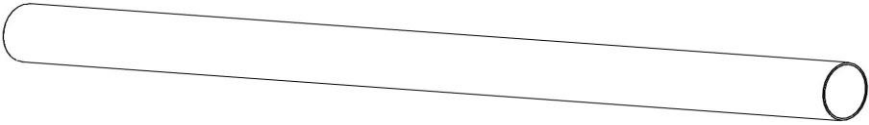
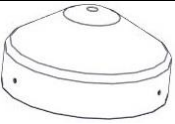
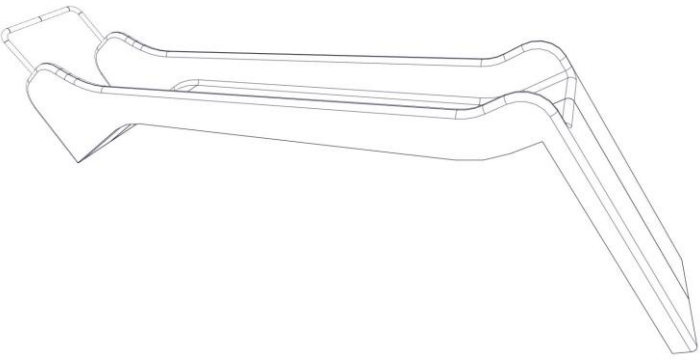
3.1 In words (please notice: piece numbers refer to 1 equipment)






Table 3-1: Delivery contents, in words

Pos.	Quantity	Element / Description	Size	O.K.	Missing
1	4	Steel posts	Ø 102 mm; length 3.40 m		
2	4	Red synthetic cover caps	for Ø 102 mm		
3	8	Pipe clips with carriage bolts and stop nuts	M10 x 40 mm lg.		
4	12	Self tapping screws	5.5 x 25 mm		
6	1	4591-30-11 Element 11 (netbridge)			
(6a)	1	4591-30- 10 Element 10 (Slide height of pedestal = 1 m)			
7	1	Crossbar+angle+ chain adapter			
10	4	Pipe clips with threaded bolts M10 + 2 nuts			
11	4	Cheese headed screws	M6 x 16 mm long		
12	4	Plain washer, DIN 125	for M6		
13	4	Plain washer, 100 DIN 9021	for M6		
14	4	Stop nuts	M6		
15	5	Allen screw + Stop nut	M6 x 20 mm , M6		
16	1	Chain adapter (stainless steel)			
17	1	ground anchor	M12		

3.2 In symbols

Table 3-2: Delivery contents, in symbols


Pos.	Quantity	Symbol
1	4	 3,40 m long
2	4	 for Ø 102 mm
3	8	 for Ø 102 mm
4	12	 5,5 x 25 mm
6	1	
(6a)	1	

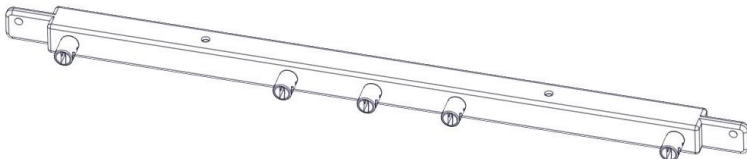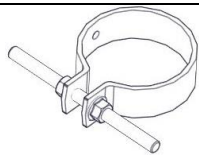7	1	
10	4	
11	4	 M10 x 70 mm
12	4	 for M10
14	4	 M10
15	5	 Allen screw M6 x 20 mm + Stop nut M6
16	1	 Chain adapter (stainless steel)
17	1	 Ground anchor M12

AB	The legally prescribed setting periods must be observed!
AM	Unit spacing (centre-centre) posts
ASV !	Refill the earth layer by layer and compress each layer
H.3	Crossbar is ready mounted
LM	Clearance post dimensions
D	Concret C25/30 (for foundation)
DR	Plan view/sketch
F	Fall protection
Gehw. Pl.	Underlay boards e.g. access boards supplied on-sit – i.e. to be laid below the posts by the client! Upper drainage level (see drawing)
G	Drainage layer 10 cm
SA	Side-view A
VA	Front-view B
O.K	Upper play level
PS	Required space including safety area
PKI	New version, instead of plastic-adapter, now with ferrule's
RW	Regular maintenance
ML	Length of mast above play level

See drawings!


Screw locking device!

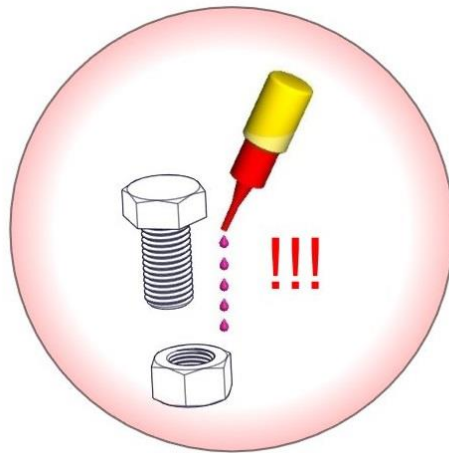

**Glue all screws, nuts and sleeves with
Loctite.**




**(not less than 5 drops!)
(except for lock nut)**



4 Erection instructions


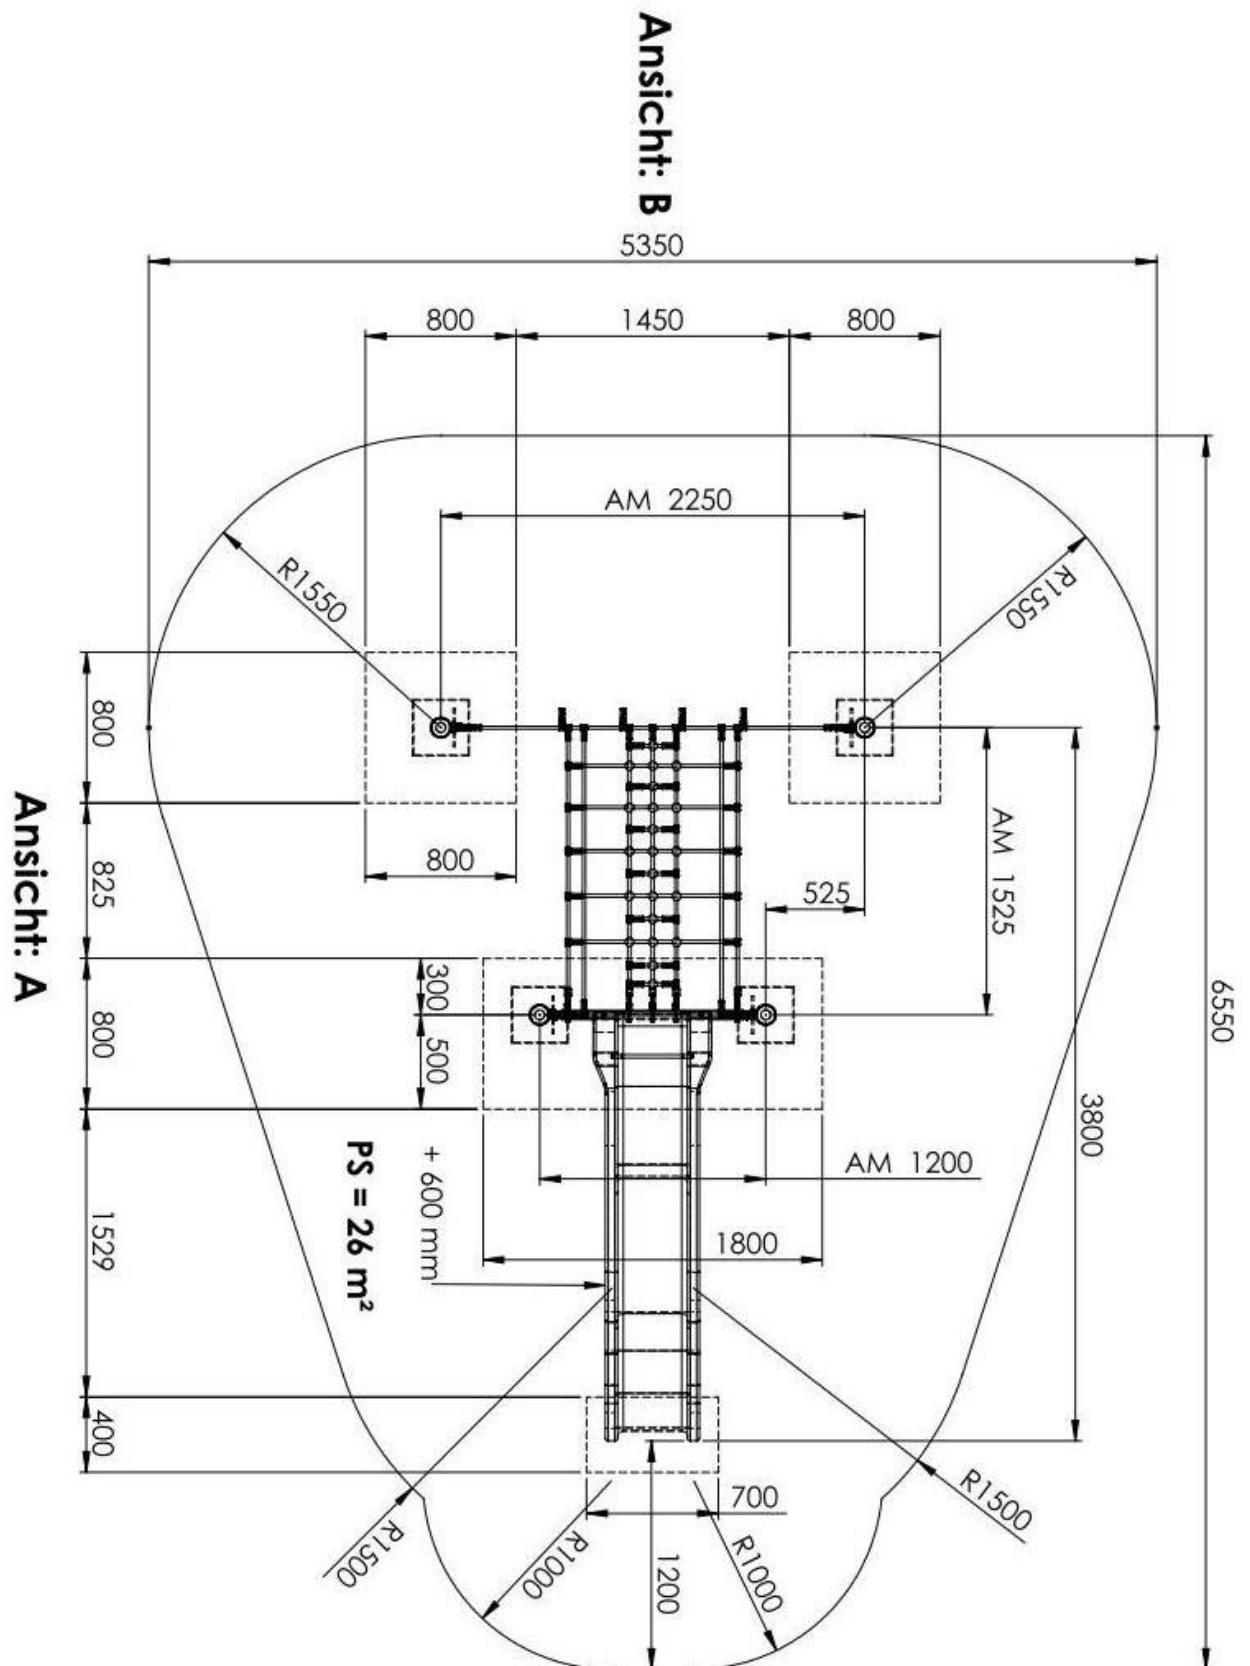








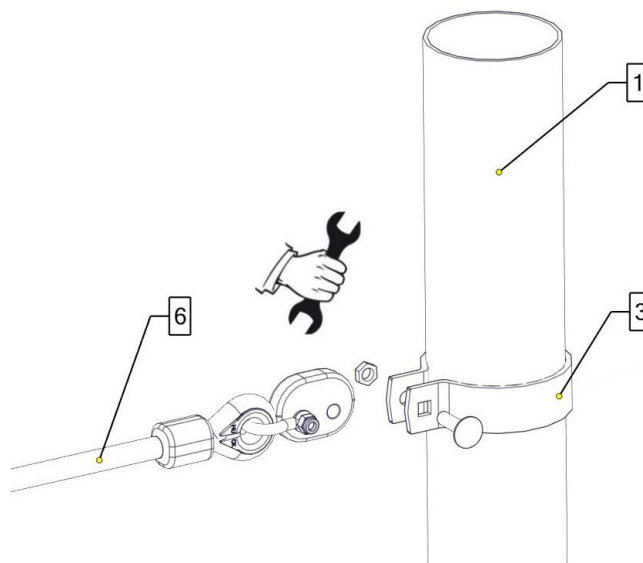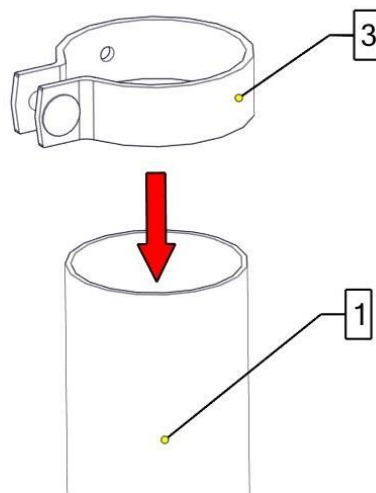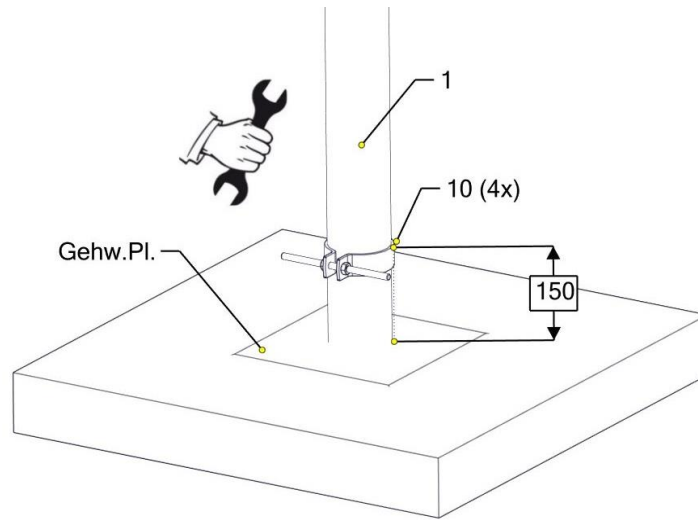

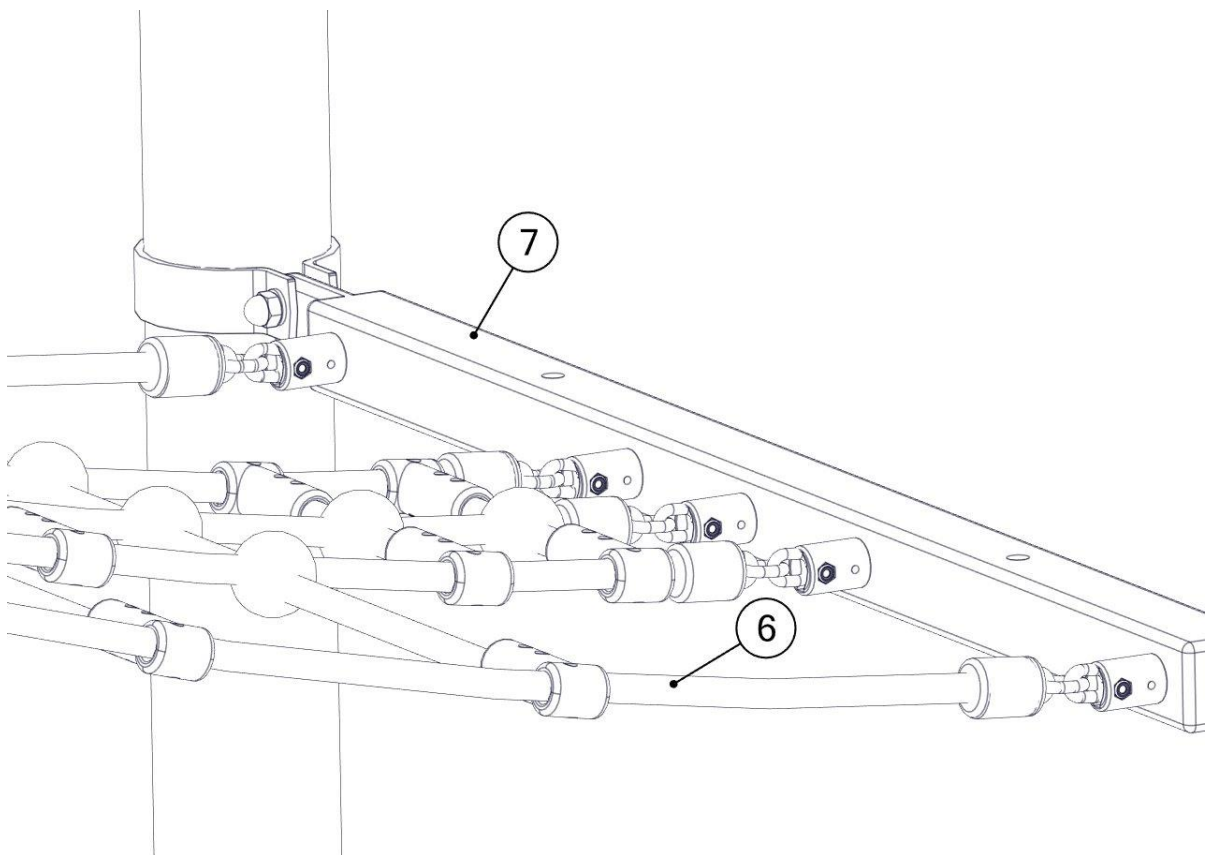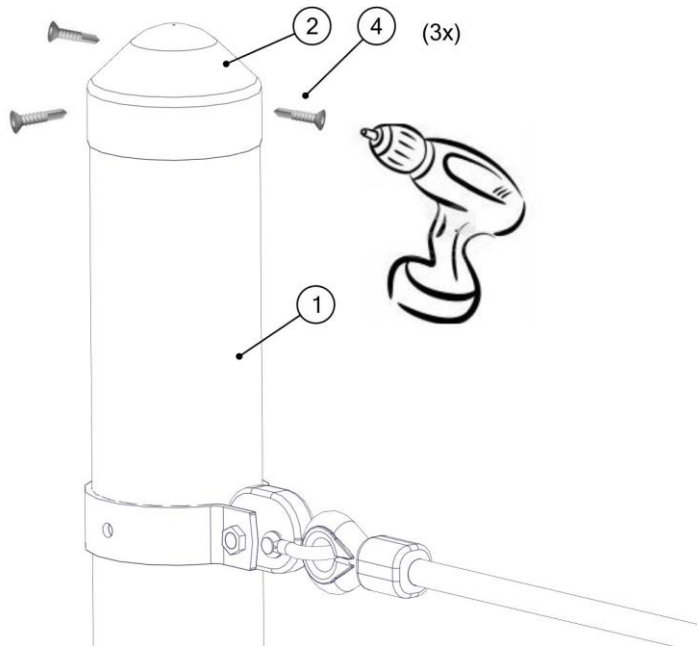

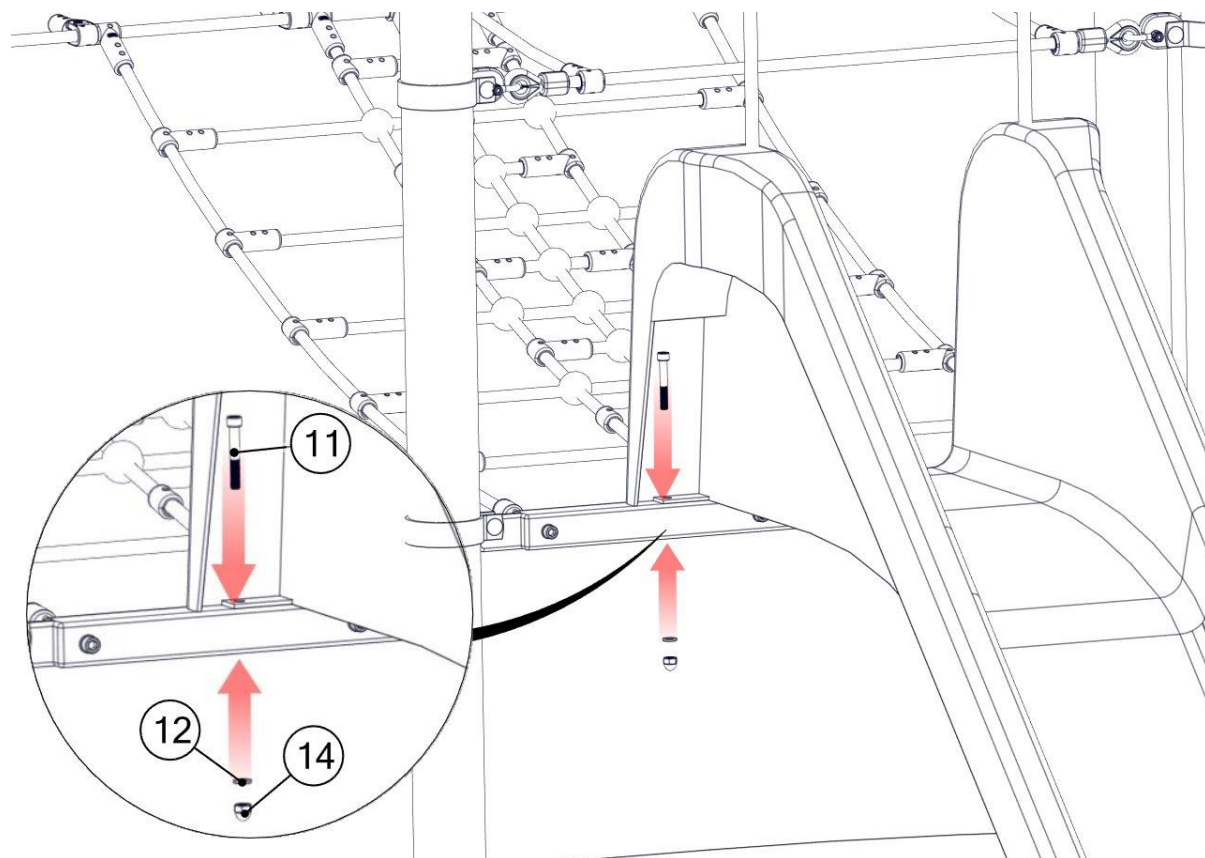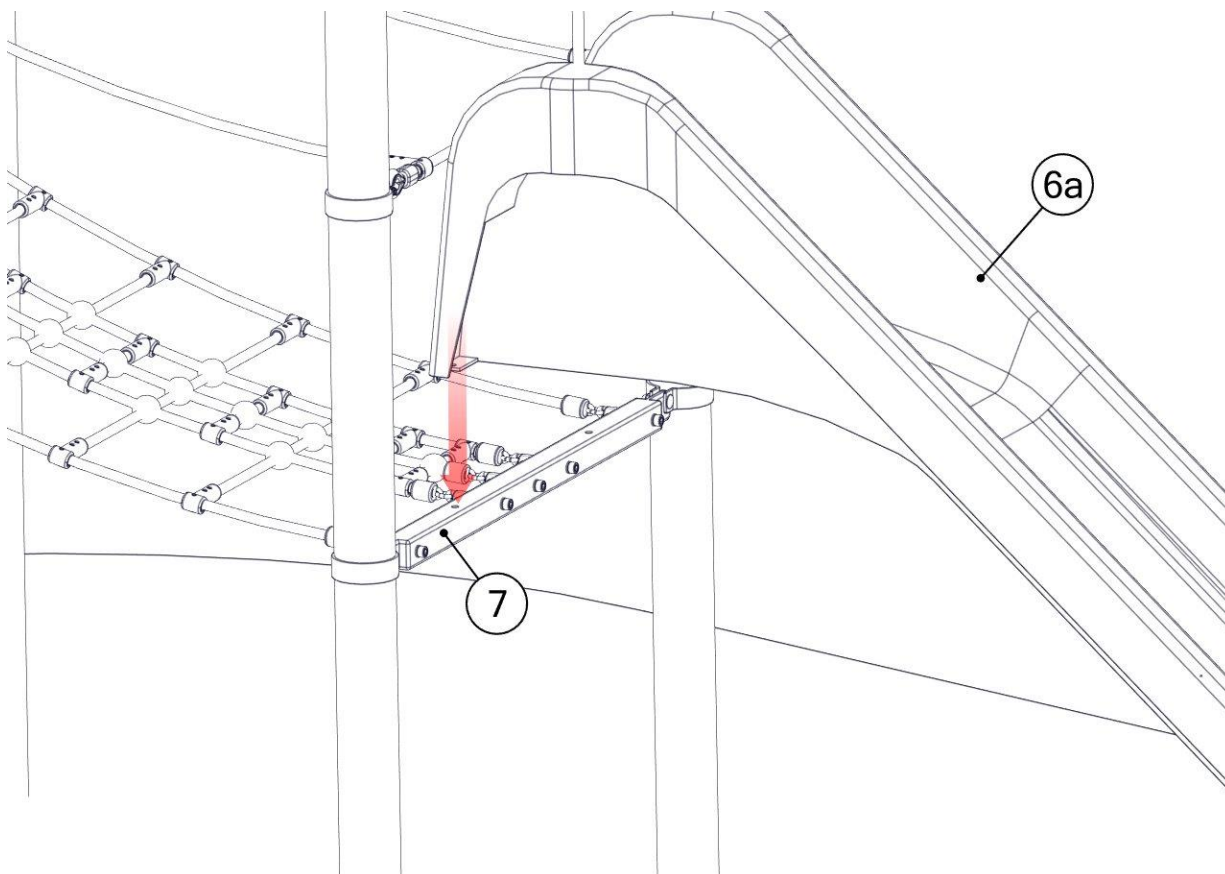

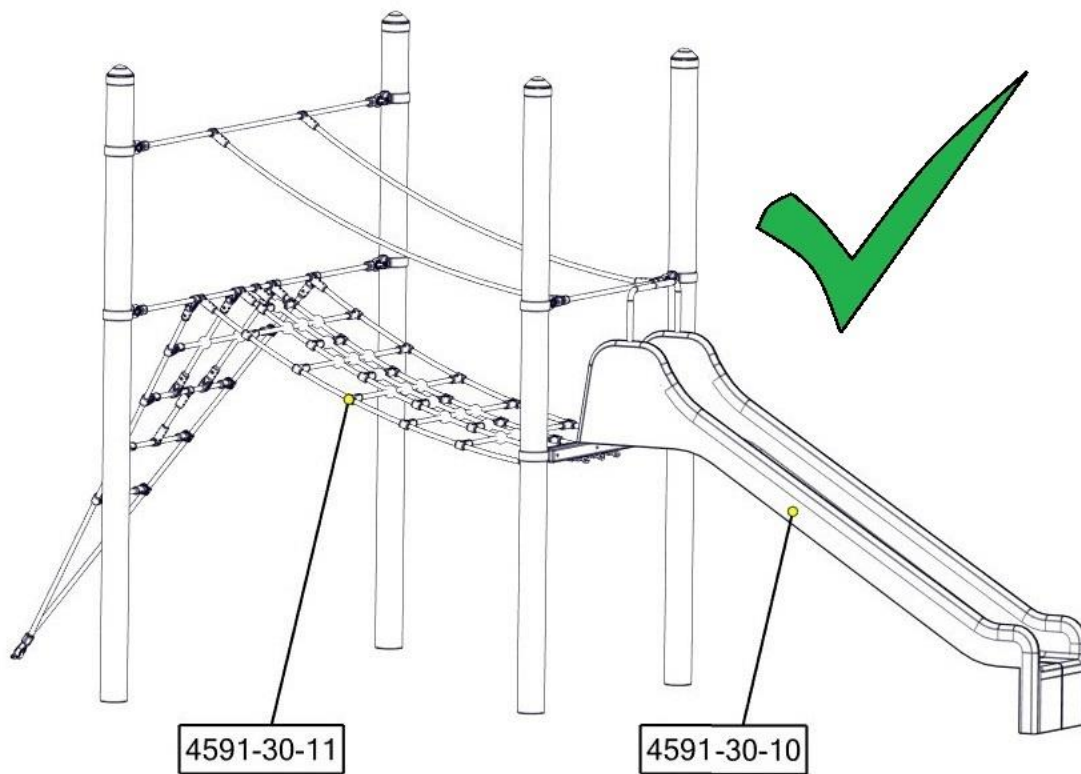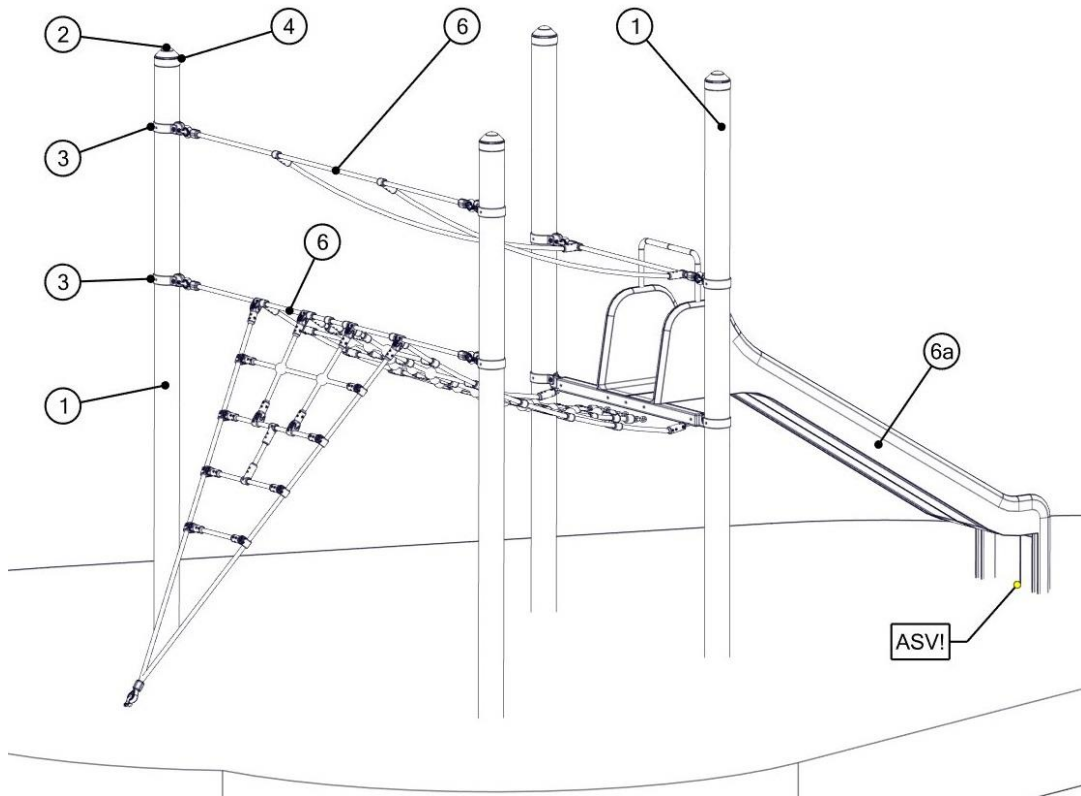

Post installation checks



If the equipment has not been installed safely, you must ensure that the public is prevented from using it.

4.1 Marking filler depth

- Labelling the posts to show the depth of material provided as fall protection (i.e. loose filler).

4.2 The equipment has not been installed safely in the following cases:

- Safe equipment installation is not complete.
- The protective surface has not been installed yet.
- Appropriate maintenance work cannot guarantee operational safety.

4.3 Removal of all assembly aids

- Please make sure that all assembly aids have been removed from the playing area. The equipment must not be approved for use until this check has been made.

4.4 Information about inspection of the equipment before it is used for the first time

- There are no special inspection requirements to be met before the equipment is used for the first time.


4.5 Retighten bolts

- After one week of play, please retighten all bolts again. Later upon respective maintenance.

B Maintenance instruction “System”

Elements 10 and 11

Art.-No. 4591-30-10 and Art.-No. 4591-30-11

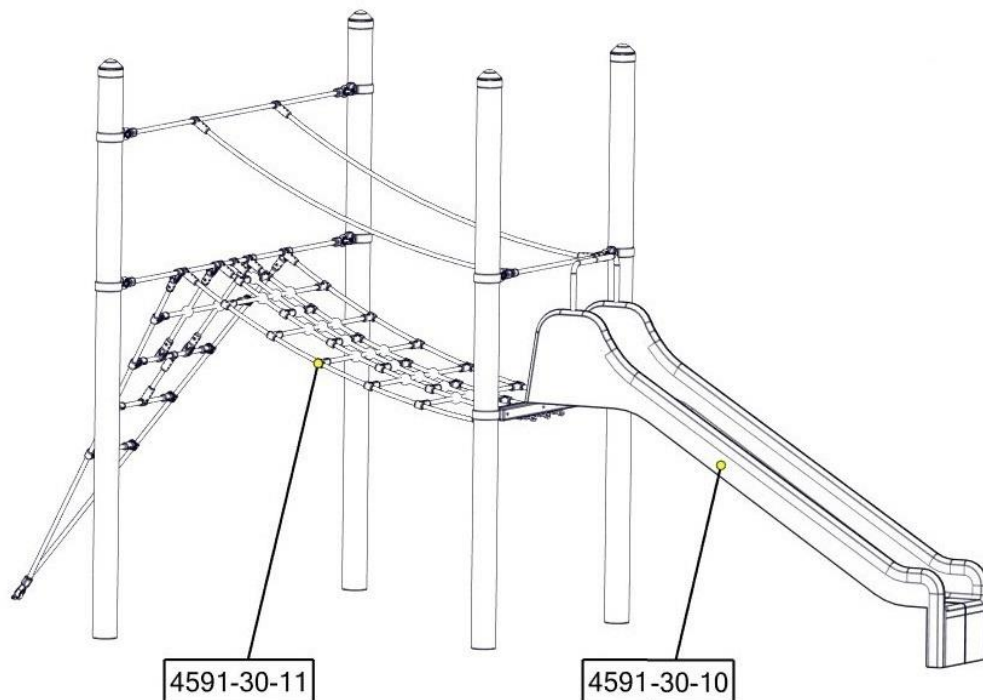

Revisionshistorie

Revision 0 – 2007- 03-08

Erste freigegebene Version

Montageanleitung SP

Revision 7– 2020-11-30

Aufstiegsnetz hinzu FH

Alle Rechte vorbehalten

© Copyright 2007 Huck Seiltechnik GmbH

5 Introduction Maintenance

5.1 General informations

This equipment should be installed, inspected, maintained and operated in accordance with EN 1176-7 guidelines.



Please note: Providing any necessary repairs are carried out, a piece of play equipment that is inspected regularly cannot become so damaged that it is dangerous.

Any spare parts which may be required can be obtained directly from your supplier.



This equipment should only be assembled, maintained and repaired by **persons with the necessary expertise**.

A copy of the inspection record should be given to the operator, who must confirm receipt.

**This maintenance instruction is based on the standard
“EN 1176-1:2017”.**

6 General maintenance information

6.1 Maintenance intervals

Maintenance intervals are based on average use. Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

6.2 Inspection frequency

The frequency of inspections must be based on actual use. Factors that affect frequency include vandalism, location (e.g. coastal proximity), air pollution and the age of the equipment.

6.3 Maintenance products and procedures

All nuts and bolts are hot-dip galvanised or stainless steel. One of the characteristics of stainless steel is that uncontrolled cold welding may occur when the nuts are tightened. To prevent this, it is necessary to spray the nuts and bolts with Teflon spray or another similar lubricant.

6.4 Spare parts

All spare parts must conform to the manufacturer's specifications.

6.5 Identifying spare parts

All spare parts are listed in the parts list. The parts list follows the installation requirements.

6.6 Special instructions for the disposal of individual equipment components

No special instructions are necessary for the disposal of individual equipment components.

6.7 Special measures during the break-in period

No later than 2 weeks after assembly, all screwed connections should be checked and tightened if necessary.

6.8 Drainage holes

All drainage holes should be kept clear.

6.9 Maintenance of protective surfaces

Surfaces providing fall protection must also be maintained regularly. It is particularly important to maintain the correct level of loose surface material and add more if necessary.

6.10 Faults



Faults must be repaired as soon as they are detected. If serious defects that compromise safety cannot be repaired straight away, the public must be prevented from using the equipment with immediate effect.

6.11 Loose screws



Loose screws always cause quality problems and put safety at risk. Therefore, loose screws should always be tightened and checks carried out to ensure that there are no missing screws (e.g. look out for holes you can see through).

6.12 Preventing equipment use

Use of the equipment should be prevented in the event of incomplete installation, disassembly, maintenance, repairs and faults.

6.13 Claims/liability for faults


Steel posts and footings are guaranteed if regular maintenance is carried out and recorded in writing. Our general terms and conditions apply. Maintenance first takes place after 3 years. The steel posts must be excavated as far as the concrete foundations and checked for corrosion.

Zinc paint should be applied to any corroded areas and scratches.

Check ropes for abrasion. Retreat any that are very worn.

7 Regular maintenance

7.1 Image

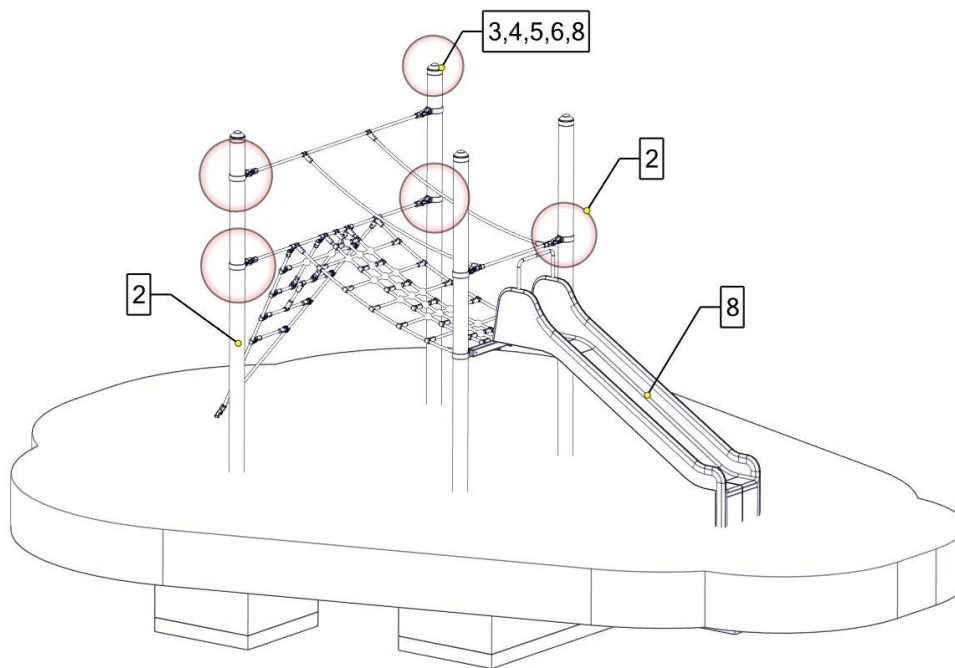

7.2 Regular maintenance

m = monthly j = 1/4 quarterly j = 1/2 half-yearly

	m	¼ j	½ j
1. Check ground in fall and protection area for hard objects and loose foundations.	X		
2. Check stability (supporting posts, springs, supports, foundations etc.).			X
3. Check all connecting elements and fittings for wear and tear and where necessary retighten. Replace damaged components.	X		
4. Check that moveable metal components (joints, springs etc) move smoothly and are not worn and where necessary replace. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.	X		
5. Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary	X		
6. Check rubber parts, sleeves, rings etc. for wear and tear or damage and replace if necessary.	X		
7. Check the surface of wooden parts for damage caused by the weather or external influences and repair (Paint with glaze) or replace if necessary.	X		
8. Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.	X		

It is recommended to carry out the **inspection and maintenance work** out in the specified time-frames, since wear and tear can occur through play, weathering influences or intentional damage, which compromises safety and function levels.

Defects, which compromise safety, must be treated promptly, either by immediately repairing or dismantling or closing down the equipment!

Defects, which compromise function, reduce the play value of the equipment and encourage vandalism, which may compromise safety levels. Damage should also be immediately repaired in this case.

Maintenance and servicing is to be carried only out by professionals.

General: Play equipment which is regularly checked may not be damaged in such a way that it becomes dangerous. However it is essential that where necessary repairs are followed up after regular checks.

8 Maintenance timetable

8.1 Special advices

8.1.1 Maintenance interval

We strongly advise you to carry out inspections and maintenance work within the specified periods as use of the equipment, the weather and malicious vandalism cause wear and tear that compromises the safety and function of the equipment.

8.1.2 Maintenance intervals in the event of intensive use

Please note that more frequent inspections and/or maintenance are required if the play equipment is subject to intensive use.

8.1.3 Faults that compromise safety



In the event of a fault that compromises safety, quick action must be taken. This may involve repairing it immediately or shutting down and dismantling the equipment.

8.1.4 Faults that compromise function



Faults that compromise function should also be repaired immediately. Such faults lower the value of the equipment to the user and encourage malicious vandalism, which may render the equipment less safe. Any damage should also be repaired immediately.

9 Monthly maintenance

- Check the spaces between the equipment and the ground (clearance and height of fall).
- Check the ground surface in the area with fall protection for hard objects and loose foundations.
- Check all connecting elements and fittings for wear and tear and tighten if necessary. Replace damaged or missing parts.
- Check that moving metal parts (joints, springs, etc.) move smoothly and are not worn. Replace if necessary. It is not necessary to lubricate joints as we only use maintenance-free metal roller bearings.
- Check all attachments such as chains, ropes, nets, etc. for damage and replace if necessary.
- Check rubber parts, sleeves, etc. for wear and tear or damage and replace if necessary.
- If necessary, remove excess padding material from the post footings due to danger of rotting.
- Check the surface of wooden parts for damage caused by the weather or external influences and mould. Repair or replace if necessary.
- Check the surface of plastic and metal parts, e.g. slides, for damage and replace if necessary.

10 Quarterly maintenance

- Detailed inspection of the operation and stability of the equipment paying particular attention to any wear and tear.
- Tighten all forms of attachment.
- Repaint and retreat surfaces.
- Maintenance of fall protection surfaces.
- Lubrication of joints.
- Check the height of the fall and top up with loose filler if necessary. If the posts are labelled, top up as far as the mark.
- Retighten all bolts

11 Half yearly maintenance

- The stability of supporting posts, supports, foundations etc is to be checked. The safety level of the entire system is to be checked after repairs have been carried out or additional system components have been installed or replaced.



Annual Maintenance

12 Annual maintenance

- Ascertaining that the equipment, foundations and surfaces are safe for operation.
- In particular, the equipment should be checked for decay and corrosion. It may be necessary to dig out or excavate certain components in order to do so. Zinc paint should be applied to corroded areas and scratches.
- Stability (check posts, bracing, foundations, etc.).
- Ascertaining whether there are any changes in equipment safety as a result of repairs that have been carried out or components that have been added or replaced.



The equipment must be inspected by someone **with the necessary expertise** in strict compliance with the instructions issued by Huck Seiltechnik GmbH.

A copy of the inspection record should be given to the operator, who must confirm receipt.

13 Maintenance printout

Name of item: SYSTEM; Elements 10 and 11 / Art. 4591-30-10 and Art. 4591-30-11

Location: _____

Customer or operator: _____
 (Town, Town council, Kindergarten)

Date of inspection	Inspector	O.K.	Accessible	Barriered	Defects	Repaired by	Date

Please copy and return once a year after main inspection has been carried out to the manufacturer by Telefax (06443) 83 11 79!

Place the confirmation form in the play equipment files.

14 Hand over document



After the installation of the equipment pass the installation and maintenance documents to the operator. The operator has to receive the hand over documents. The complete filled and signed hand over document should be sent to the supplier.

Art.-No.: 4591-30-10 and 4591-30-11

Type of item: SYSTEM, Elements 10 and 11

Serial number:

Customer or operator (Town, Town council, Kindergarten, etc.):

Competent person in charge:

Installation company (address):

Responsible assistant (assembler):

Received the complete assembly instructions, maintenance instructions and maintenance printout .

(Signature of operator)
(Stamp)

(Signature of installation company)

Date: _____